

COMP. PNEUMATIQUES - Raccords

Type FISS.005 - Coude non orientable conique - BSPT Mâle



Ø ext. tube	Ø Racc.	Référence
4 mm	R1/8"	FISS.005.0418
	R1/4"	FISS.005.0414
6 mm	R1/8"	FISS.005.0618
	R1/4"	FISS.005.0614
8 mm	R1/8"	FISS.005.0818
	R1/4"	FISS.005.0814
	R3/8"	FISS.005.0838
10 mm	R1/4"	FISS.005.1014
	R3/8"	FISS.005.1038
12 mm	R1/4"	FISS.005.1214
	R3/8"	FISS.005.1238
	R1/2"	FISS.005.1212

Type FISS.008 - Té orientable piquage conique en bout - BSPT Mâle



Ø ext. tube	Ø Racc.	Référence
4 mm	R1/8"	FISS.008.0418
	R1/4"	FISS.008.0414
6 mm	R1/8"	FISS.008.0618
	R1/4"	FISS.008.0614
8 mm	R1/8"	FISS.008.0818
	R1/4"	FISS.008.0814
	R3/8"	FISS.008.0838
10 mm	R1/4"	FISS.008.1014
	R3/8"	FISS.008.1038
12 mm	R1/4"	FISS.008.1214
	R3/8"	FISS.008.1238
	R1/2"	FISS.008.1212

Type FISS.006 - Té orientable piquage conique central - BSPT Mâle



Ø ext. tube	Ø Racc.	Référence
4 mm	M5	FISS.006.04M5
	R1/8"	FISS.006.0418
	R1/4"	FISS.006.0414
6 mm	R1/8"	FISS.006.0618
	R1/4"	FISS.006.0614
8 mm	R1/8"	FISS.006.0818
	R1/4"	FISS.006.0814
	R3/8"	FISS.006.0838
10 mm	R1/4"	FISS.006.1014
	R3/8"	FISS.006.1038
12 mm	R1/4"	FISS.006.1214
	R3/8"	FISS.006.1238
	R1/2"	FISS.006.1212

Type FISS.009 - Traversée de cloison union égale



Ø ext. tube	Ø Racc.	Référence
4 mm	M11X0,75	FISS.009.04M11
6 mm	M13X1	FISS.009.06M13
8 mm	M16X1,25	FISS.009.08M16
10 mm	M18X1	FISS.009.10M18
12 mm	M22X1,5	FISS.009.12M22

Type FISS.007 - Té orientable piquage cylindrique central - BSPP Mâle



Ø ext. tube	Ø Racc.	Référence
4 mm	G1/8"	FISS.007.0418
	G1/4"	FISS.007.0414
6 mm	G1/8"	FISS.007.0618
	G1/4"	FISS.007.0614
8 mm	G1/8"	FISS.007.0818
	G1/4"	FISS.007.0814
	G3/8"	FISS.007.0838
10 mm	G1/4"	FISS.007.1014
	G3/8"	FISS.007.1038
12 mm	G1/4"	FISS.007.1214
	G3/8"	FISS.007.1238
	G1/2"	FISS.007.1212

Type FISS.010 - Union double égal



Ø ext. tube	Référence
4 mm	FISS.010.0404
6 mm	FISS.010.0606
8 mm	FISS.010.0808
10 mm	FISS.010.1010
12 mm	FISS.010.1212
14 mm	FISS.010.1414